



XAIR A400N Outdoor High-Power 802.11 B/G/N Wireless AP Router (1T1R) Quick Installation Guide

Package Content



XAIR A400N

12V Power
Adapter

PoE
Injector



CD




Cable Tie



Quick Installation
Guide

Quick Installation Steps

1. Push the button in the side to remove upper housing
2. Pass through Ethernet cable from the hole; insert the cable to Secondary port.
3. Install the upper housing and make sure the housing is well installed.
4. Complete the hardware installation as diagram as below
Install POE Injector
DC: Insert adapter
POE: This hole is linked to Secondary port of the Outdoor Router with RJ-45.
LAN: This hole is linked to LAN side PC/Hub or Router/ADSL modem device with RJ-45

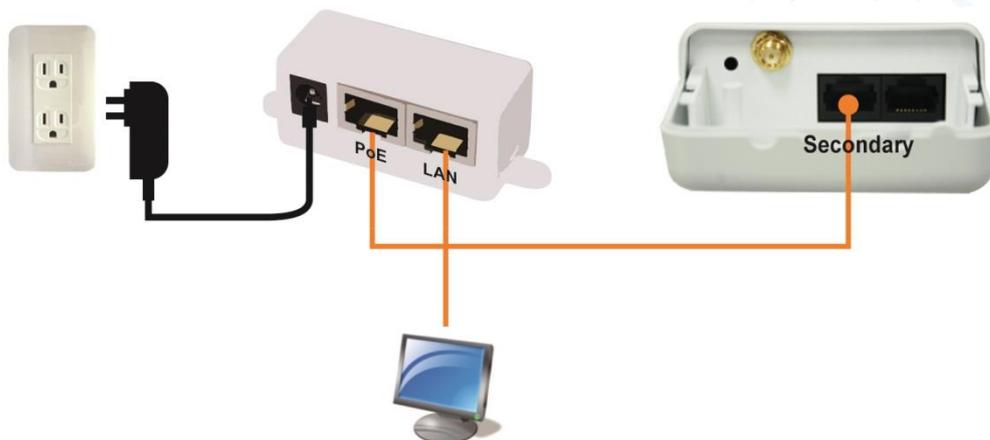



NOTE.

1. There is no software driver or utility installation needed.
2. RJ-45 8P8C Ethernet cable is required.
3. It will take about 50 seconds to complete the boot up sequence after powered on the Outdoor Router; Power LED will be active, and after that the WLAN Activity LED will be flashing to show the WLAN interface is enabled and working now.

Software Configuration

Network Connection Setup

The default IP of XAIR A400N is 192.168.1.254. You have to make sure your computer is on the same network segment as XAIR A400N before connecting to XAIR A400N.

Example: In the Windows 7 operating system

1. Click the *Start* button and select *Settings*, then click *Control Panel*. The *Control Panel* window will appear.
2. Move mouse and double-click the right button on *Network Connections* item. The *Network Connections* window will appear. Double click *Local Area Connection* icon, then User Account Control window shown. Right click Continue button to set properties.
3. In *Local Area Connection Properties* window, Choose *Networking* tab, move mouse and click *Internet Protocol Version 4 (TCP/IPv4)*, then click *Properties* button.
4. Move mouse and click *General* tab, Select *Specify an IP address* and type in values as following example.
 - ✓ IP Address: 192.168.1.1 any IP address within 192.168.1.1 to 192.168.1.253 is good to connect the Wireless LAN Access Point.
 - ✓ IP Subnet Mask: 255.255.255.0
5. Click *OK* to complete the IP parameters setting.

Get started with XAIR A400N

1. Open Web browser and enter **192.168.1.254** in the URL field of Web browser.



2. Enter “**admin**” as default user name, and “**admin**” as default password.



3. After successful login , you'll see the system status on the screen. Regarding to detailed Web configurations, please refer to user manual placed in product CD.

For more information please visit our website : www.xentino.com