


VS0801H 8-Port HDMI Switch RS-232 Control Tool

V1.0.062

User Manual

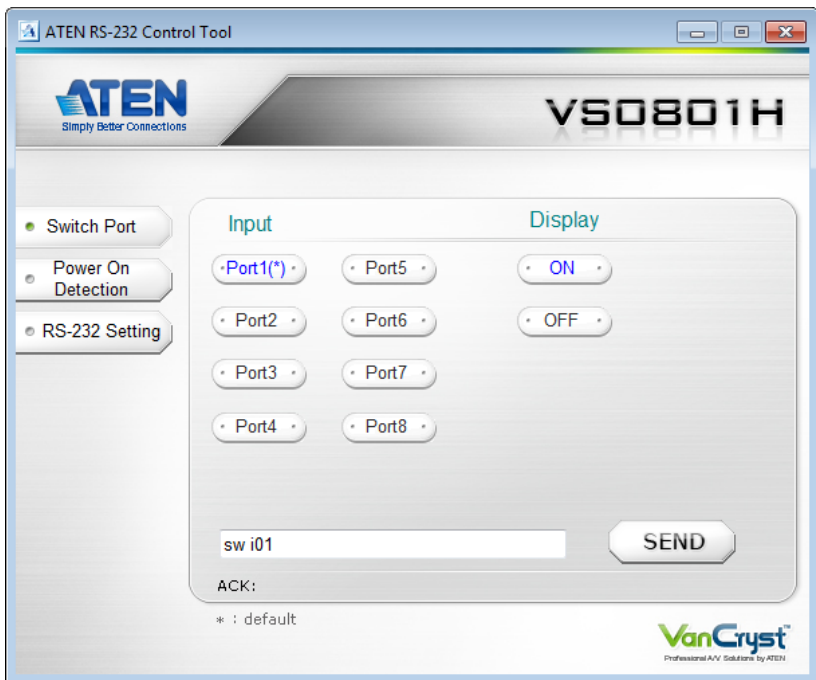

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna;
- ◆ Increase the separation between the equipment and receiver;
- ◆ Connect the equipment into an outlet on a circuit different from that which the receiver is connected;
- ◆ Consult the dealer or an experienced radio/television technician for help.

RoHS

This product is RoHS compliant.

SJ/T 11364-2006

The following contains information that relates to China.

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
电器部件	●	○	○	○	○	○
机构部件	○	○	○	○	○	○

- : 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求之下。
- : 表示符合欧盟的豁免条款，但该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。
- ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006的限量要求。



RS-232 Control Tool Operation

Overview

The VS0801H's built-in bi-directional RS-232 serial interface allows system control through a high-end controller, PC, and/or home automation / home theater software package. The RS-232 Control Tool is an application used to send operational commands from your PC – to the VS0801H through a serial (RS-232) interface connection. RS-232 serial operations to and from the VS0801H can be managed using ATEN's Graphical User Interface (GUI) on computers that are running the Microsoft Windows operating system. In order to use the RS-232 Control Tool, two separate programs must be installed on the PC- .NET Framework 2.0 and the RS-232 Control Tool. The procedure for installing and operating the RS-232 Control Tool is detailed in the following section.

Before You Begin

Installing .NET Framework 2.0

To install .NET Framework on your PC, do the following:

1. Download the executable file from the ATEN website or the Microsoft Download Center online, and run it.
2. Follow the instructions on the screen. The installation applet will automatically detect the operating system and install the correct drivers.

Installing the RS-232 Control Tool


To install the RS-232 Control Tool, do the following:

1. Download the RS-232 Control Tool from the Download or VS0801H's *Resource* page on our website:

www.aten.com


2. Save the file to a convenient location.

3. Double click to run the setup file. The Welcome screen appears:

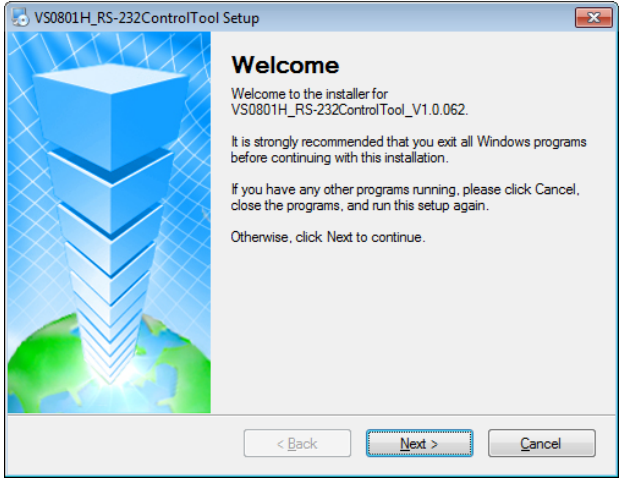


Click **Next**.

4. The License Agreement appears:

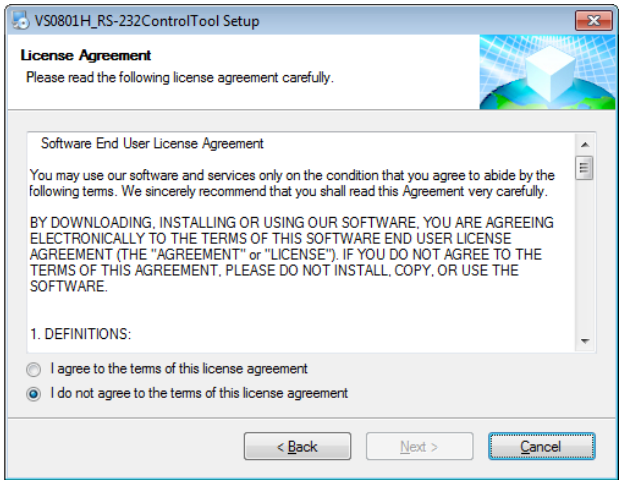

If you agree with the License Agreement, select *I agree with the terms of this license agreement*, and click **Next**.


5. The User Information screen appears:

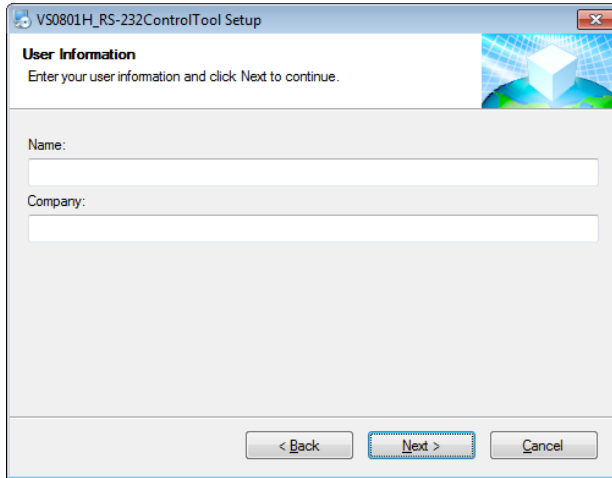

The screenshot shows a window titled "VS0801H_RS-232ControlTool Setup". The main heading is "User Information" with the instruction "Enter your user information and click Next to continue." Below this are two text input fields: "Name:" and "Company:". At the bottom of the window are three buttons: "< Back", "Next >" (which is highlighted with a blue border), and "Cancel".


Fill in your *Name* and *Company*, then click **Next**.

6. When the Installation Folder screen appears, you can select where you want to install the program by clicking **Change**, or use the default installation location provided, then click **Next**.

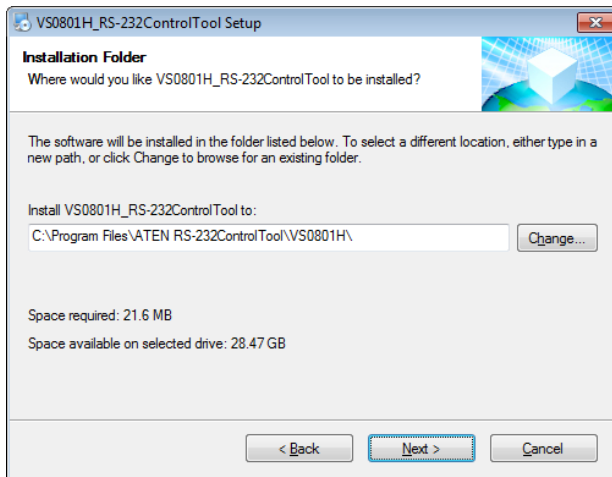


The screenshot shows a window titled "VS0801H_RS-232ControlTool Setup". The main heading is "Installation Folder" with the question "Where would you like VS0801H_RS-232ControlTool to be installed?". Below this is a paragraph: "The software will be installed in the folder listed below. To select a different location, either type in a new path, or click Change to browse for an existing folder." There is a text input field containing "C:\Program Files\ATEN RS-232ControlTool\VS0801H\" and a "Change..." button to its right. Below the input field, it says "Space required: 21.6 MB" and "Space available on selected drive: 28.47 GB". At the bottom of the window are three buttons: "< Back", "Next >" (highlighted with a blue border), and "Cancel".

7. From the Shortcut Folder screen type in or use the drop-down menu to enter the folder where you want to install the shortcuts:

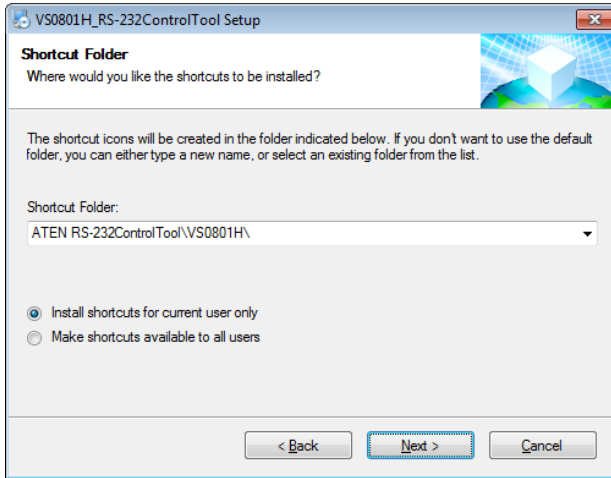


Then select *Install shortcuts for current user only*, or *Make shortcuts available to all users*, and click **Next**.

8. At the Ready to Install screen confirm your settings, click **Back** if you need to make changes, or click **Next** to begin the installation:

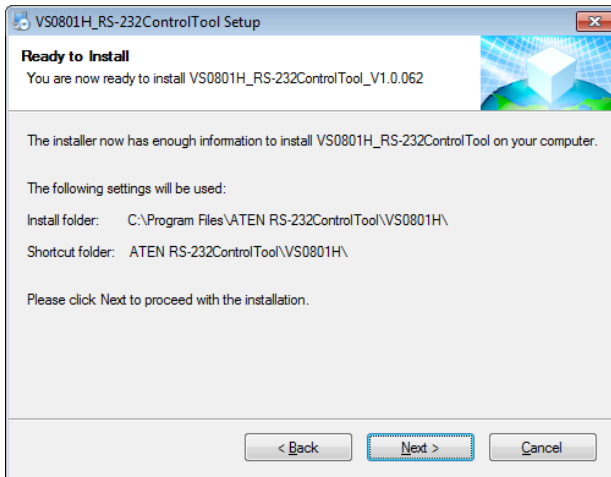

9. When the installation has completed successfully, the following screen will appear:

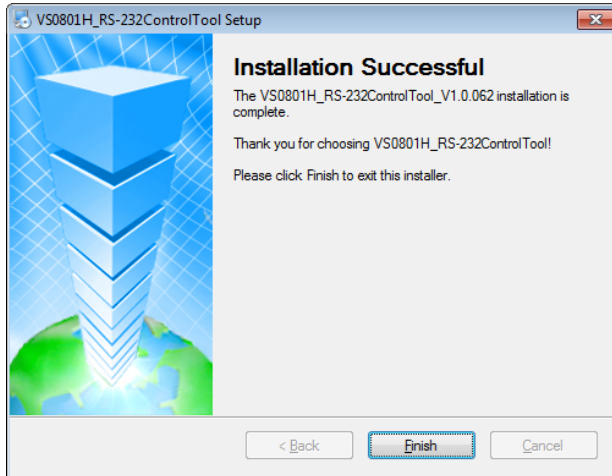

Click **Finish**. You are now ready to use the RS-232 Control Tool.


GUI Main Page

The RS-232 Control Tool is a convenient and intuitive application to send RS-232 commands to your VS0801H. For detailed information about the function of each RS-232 command, see the VS0801H user manual. To invoke the GUI, simply click the RS-232 Control Tool shortcut. The interface opens on the *Switch Port* page by default, as shown below:



The various elements of the GUI are described in the following sections.

Switch Port

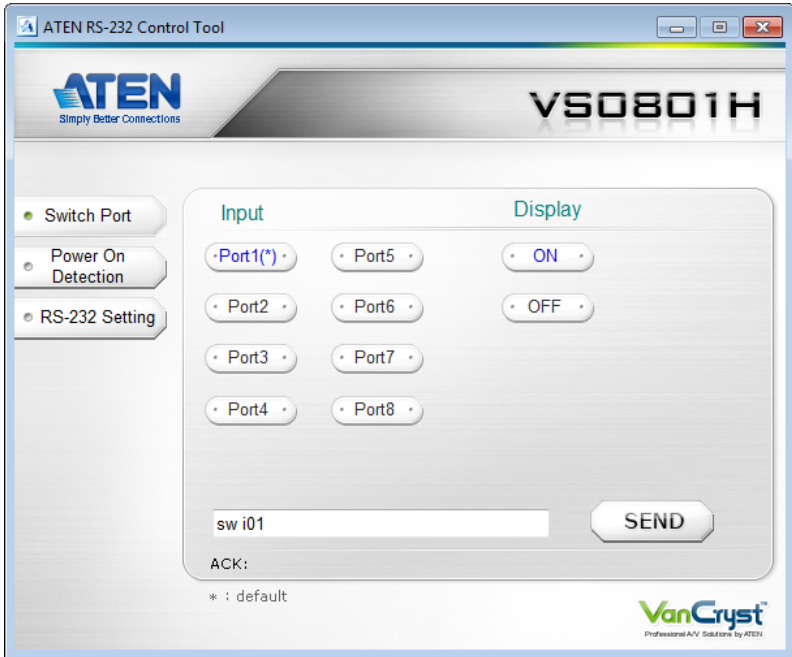

The Switch Port page is used to connect a source device to the display port, and to power the display port On/Off. On the Switch Port page, the following actions are possible:

- ◆ Click on an **Input** port button (options are Ports 1–8).
- ◆ Turn the **Display** On or Off.
- ◆ Use the text box to manually enter the command.
- ◆ Click **Send** to send the command.

Switch Port Commands

These actions can also be performed by keying the command into the text box, and clicking **Send**.

The available formulas for Switch Port commands are as follows:

1. Switch Command + Input Command + Port Number + [Enter]

For example, to switch to input port 02, type the following:

sw i02 [Enter]

2. Switch Command + Control + [Enter]

For example, to switch to the next input port, type the following:

sw + [Enter]

3. Switch Command + Control + [Enter]

For example, to turn off the display port, type the following:

sw off [Enter]

Possible Values

The following table shows the possible values for switch commands:

Command	Description
sw	Switch command

Input Command	Description
i	Input command

Input Port Number	Description
xx	01-08 port (default is 01)

Control	Description
on	Turn on
off	Turn off
+	Next port
-	Previous port

Enter	Description
[Enter]	Enter and send out the command

Switch Port Command Table:

Cmd	In	N1	Control	Enter	Description
sw	i	xx		Enter Key	Switch to Input Port xx (xx:01~08)
sw			on	Enter Key	Turn on the Output Port
sw			off	Enter Key	Turn off the Output Port
sw			+	Enter Key	Switch to the next Input port
sw			-	Enter Key	Switch to the previous Input port

Acknowledge:

After commands are sent acknowledge messages are returned.

Ack	Description
Command OK	Command is correct and function executed
Command Incorrect	Unavailable command or parameters

Note: 1. Each command string can be separated with a space.

2. The **Port Number** command string can be skipped, and the default value will be used.

Power on Detection



The Power on Detection page is used to enable or disable the Power on Detection feature. Power on Detection is used to automatically switch to the next port with a powered on device, when the current port device is powered off. The Power on Detection feature is turned on by default.

From the Power on Detection page, the following Functions are possible:

- ◆ Select **On** to enable the Power on Detection feature (default).
- ◆ Select **Off** to disable the Power on Detection feature.
- ◆ Use the text box to manually enter the command.
- ◆ Click **Send** to send the command.

Power on Detection Commands:

These actions can also be performed by keying the command into the text box, and clicking **Send**.

The formulas for Power on Detection commands are as follows:

1. Command + Control + [Enter]

For example, to turn off power on detection, type the following:

pod off [Enter]

2. Command + Control + [Enter]

For example, to turn on power on detection, type the following:

pod on [Enter]

Possible Values

The following table shows the possible values for power on detection commands:

Command	Description
pod	Power on Detection command


Control	Description
on	Turn on (default)
off	Turn off

Enter	Description
[Enter]	Enter and send out the command

Power on Detection Command Table:

Cmd	Control	Enter	Description
pod	on	Enter Key	Turn on Power on Detection
pod	off	Enter Key	Turn off Power on Detection

RS-232 Setting

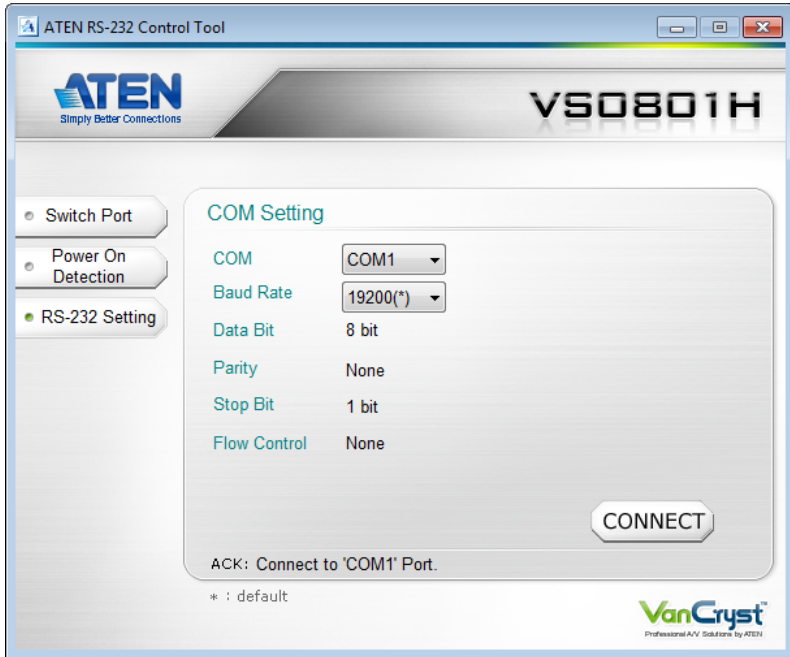

On the RS-232 Settings page, the serial port should be configured as follows:

Baud Rate	19200
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

From the RS-232 Settings page you can set the COM serial port and Baud Rate. To set the COM port or Baud Rate, do the following:

- ◆ Select a **COM** port or **Baud Rate** from the drop-down menu and click **CONNECT**.

If the port connection exists, the *Acknowledgment* message will read:

Open port 'COM1' successfully.